## 调整 BIOS 选项操作步骤

第一步 开机时按键盘"delete"键进入 BIOS 界面

第二步 用键盘方向键控制选择红框内的选项并按下回车键

Main Advanced	Chipset Securit
<ul> <li>Trusted Computin</li> <li>ACPI Settings</li> </ul>	g
<ul> <li>IT8786 Super IO</li> <li>Hardware Monitor</li> </ul>	Configuration
<ul> <li>Intel(R) Smart C</li> <li>S5 RTC Wake Sett</li> </ul>	onnect Technology ings
<ul> <li>Serial Port Const</li> <li>CPU Configuration</li> </ul>	ole Redirection
<ul> <li>PPM Configuration</li> <li>IDE Configuration</li> </ul>	
<ul> <li>USB Configuration</li> <li>Security Configuration</li> </ul>	1 1
Configur	ration

第三步 选择红框内选项并按下回车键

IT8786 Super	• ]	CO Configuration	n
Super IO Chi	ip		
▶ Serial Port	1	Configuration	
Serial Port	2	Configuration	
Serial Port	З	Configuration	
Serial Port	4	Configuration	
Serial Port	5	Configuration	
Serial Port	6	Configuration	

第四步 选择红框内选项并按下回车键,然后再选择"Disabled"并 按回车键



第五步 按F4 调出保存菜单,然后按回车键保存,主机会自动重启

ion		Er
	[Enabled] IO=3F8h; IRQ=4;	
	[Auto] [Disabled]	
	Save & Exit Setup	
	Yes No	+: ↓: nte
		/-: F1: F2: